


## Overall Dimension

Overall dimension (L×H×W) 106.5mm×118mm×17.5mm

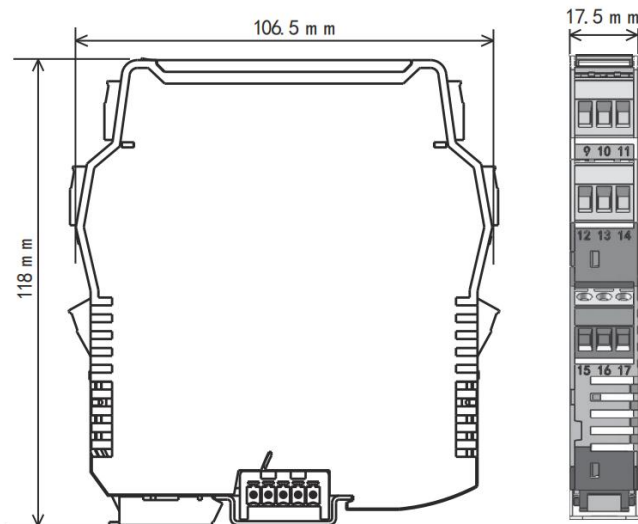


## Install

The isolated safety barrier shall be installed in a safe place, and at the same time, it shall comply with GB3836.13-2013 "Explosive Atmosphere Part 13: Equipment Repair, Maintenance, Repair and Transformation", GB/T33836.15-2017 "Explosive Atmosphere Part 15: Design, Selection and Installation of Electrical Devices", GB/T3836.15-2017 "Explosive Atmosphere Part 16: Inspection and Maintenance of Electrical Devices", Relevant provisions of GB15577-2018 "Safety Code for Dust Explosion Protection" and GB50257-2014 "Code for Construction and Acceptance of Electrical Installations in Explosive and Fire Hazard Atmospheres in Electrical Installation Engineering"

The isolated safety barrier adopts DIN35mm guide rail installation method, and the installation steps are as follows


- 1) Clamp the bus power socket on the rail (if there is no power bus power supply function, this step is omitted).
- 2) Clamp the upper end of the instrument on the guide rail;

- 3) Push the bottom of the instrument into the guide rail.

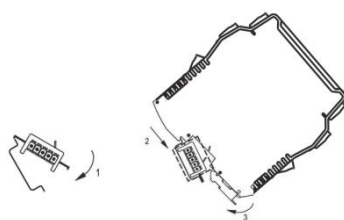

## Dismantle


- (1) Use a screwdriver (knife width ≤6mm) to insert the metal latch at the lower end of the instrument;
- (2) Push the screwdriver up and pry the metal clip down;
- (3) Pull the instrument up and out of the guide rail.

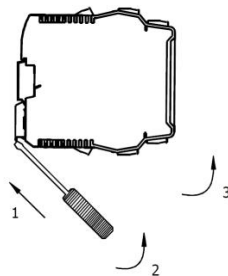

4

## Wiring

- 1) The instrument wiring adopts removable terminal blocks, which is convenient for use. The intrinsically safe end (blue plug) is the signal terminal leading to the dangerous side, and the non-intrinsically safe end (green plug) is the signal terminal leading to the safe side.
- 2) Intrinsically safe wires with blue marks shall be selected for the wiring on the intrinsically safe side. The soft copper sectional area of the wire must be greater than 0.5, mm<sup>2</sup>. The insulation strength shall be greater than 500V.
- 3) The wiring conductors at the intrinsically safe end and the non-intrinsically safe end of the isolated safety barrier shall be laid separately in the trunking, with protective sleeves.
- 4) The exposed length of the wire is about 7mm, which is locked by M3 screw (the power bus plug terminal is locked by M2 screw).

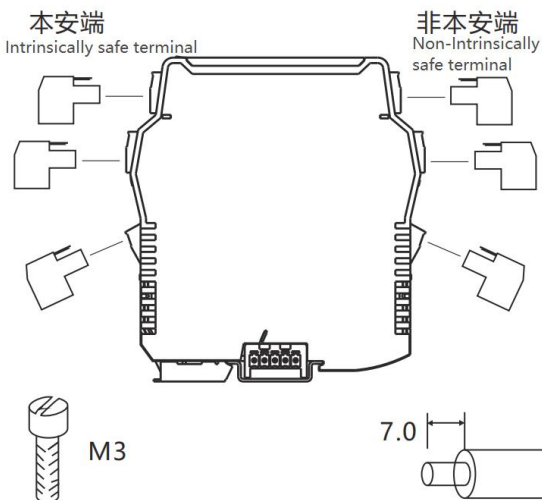

## Maintenance

- 1) Before the power-on commissioning of the isolated safety barrier, the model and explosion-proof grade of the isolated safety barrier must be checked again to see whether they are consistent with the design and use environment, and the wiring between the safety side and the dangerous side, as well as the polarity of their power supply and signal, must be checked again to see whether they are correct.
- 2) Strictly use a megger to test the insulation between the terminals of the isolated safety barrier. If you want to check the insulation of the system line, you should

## Anhui Taihua Instrument Co., Ltd

ADD: Bld8 Standardized plant, Circular Economy Demonstration Park,  
Yongqiao district, Suzhou city, Anhui Province, China  
TEL: +86 0557-3042599  
Website: www.th-i.com  
E-mail: sales@th-i.com



Isolated Safety Barrier Instructions V1.1  
first disconnect all the isolated safety barrier wiring, otherwise it will cause the internal fast fuse to blow.

3) The products have been strictly inspected and quality controlled before leaving the factory. In case of any abnormal operation, please contact the nearest agent or directly contact the technical support hotline.

4) Within 36 months from the date of delivery, any product quality problem during normal use shall be repaired by our company free of charge.

TM-I01XX- EX(1 IN/1 OUT)  
TM-I05XX- EX(2 IN/2 OUT)

## Isolated Safety Barrier Instructions



## NOTICE

- Please check the product packaging, product label model, specifications are consistent with the order contract;
- Please read this manual carefully before installation and use. If you have any questions, please contact our technical support hotline;
- The product need to installed in a safe place;
- 24V DC power supply for instrument, 220V AC power supply is strictly prohibited;
- It is strictly prohibited to disassemble and assemble the instrument without permission to prevent instrument failure or failure.
- The Company reserves the right to change the product without prior notice to the user. In case of any discrepancy between the contents of the instructions and the website, samples and other materials, the instructions shall prevail.
- Please scan the code for more product information and configuration software.



Micro cloud



Baidu cloud disk

### Profile

TM-IO5XX-EX series of isolated safety barriers at the operating end can isolate and transmit 4~20mA signals from the safety zone to the dangerous zone, and drive the on-site actuator and other equipment.

The product uses DC24V power supply, and the power supply, input and output are isolated from each other.

Adopt 17.5mm ultra-thin shell, DIN35mm standard guide rail independent installation mode (optional bus power supply function).

SELECTION TABLE				
TM-IO	X	X	X	Instructions
Channel	1			1 IN / 1 OUT
	5			2 IN / 2 OUT
Input Signal	1			4-20mA
	2			0-20mA
Output Signal	1			4-20mA
	2			0-20mA
	4			0-5V

### Main Technical Parameters

**Number of Channels:** 1 IN/1 OUT(TM-IO1XX-EX)  
2 IN/2 OUT(TM-IO5XX-EX)

**Safety test output:**  
Input Signal:0/4~20mA  
pressure drop:≤6V

**Hazardous side input:**  
Current output:0/4~20mA,load resistance:RL≤800Ω

Voltage output:0/1~5V;load resistance:RL≥330KΩ

Note:The user needs to specify the output gauge when ordering

Power:DC24V,Voltage range:DC18~36V

Consumption current:  
≤100mA(2 IN/2OUT,24V power supply,when 20mA)

**Output accuracy:**±0.1%F.S

Temperature drift: 0.005%F.S./°C

Response time:≤2mS(0-90%)(TYP)

**Insulation strength:**

Non-local safety end~local safety end≥2500VAC

Power~local safety end≥500VAC

Insulation resistance:

Non-local safety end~local safety end≥100MΩ

Power~local safety end≥100MΩ

**Electromagnetic compatibility:**EMC Accord with IEC61326-1(GB/T18268)  
IEC61326-3-1

Applicable place:Installed in a safe place, it can be connected with intrinsically safe instruments in hazardous areas up to Zone 0 IIC and Zone 20 IIC

Applicable field equipment:Two-wire valve positioner, electrical converter.

### Use environment

(1)The surrounding environment shall be free of strong vibration, impact, large current, spark and other electromagnetic induction effects. The use environment shall not contain harmful substances that can corrode metal and plastic parts, and shall not contain flammable and explosive substances.

(2)Working temperature:-20°C~+60°C

(3)Storage temperature: -40°C~+80°C

(4)Relative humidity:10%~90%RH

### Safety certification

Certification of national explosion-proof safety supervision and inspection station for instruments and meters.

Certification standards: GB3836.1,GB3836.4

Explosion-proof sign:[Exia Ga]IIC

Max voltage:Um=250V

(79.10.12.13Between terminals)

Uo=28V,Io=93mA,Po=651mW,IIC:Co=0.083μF, Lo=4.0mH

Pay attention to the following requirements when using the maximum external capacitance (Co) and inductance (Lo) values:

(1) For circuits containing only distributed inductance and capacitance, such as distributed capacitance and inductance of cables, the maximum allowable external capacitance and inductance values are the allowable values of Co and Lo in the certification parameters.

(2) For the circuit combined with cables, when the intrinsically safe circuit contains the maximum inductance less than 1% of the allowable value in the certification parameters or the maximum capacitance less than 1% of the allowable value in the certification parameters, the maximum allowable external capacitance and inductance values are the allowable values of Co and Lo in the certification parameters.

(3) For inductive and capacitive combined circuits, when the inductance and capacitance are greater than 1% of the allowable values of Co and Lo in the certification parameters (excluding cables), the maximum allowable external capacitance and inductance values are 50% of the allowable values of Co and Lo in the certification parameters.

### Intrinsically safe explosion-proof circuit system


The isolated safety barrier and the on-site intrinsically safe instrument are connected to form an intrinsically safe explosion-proof circuit (intrinsically safe circuit). The system must be confirmed before use.

1) The explosion-proof grade of the on-site intrinsically safe instrument shall conform to the use environment, and it shall be the instrument with the explosion-proof certification issued by the national authorized explosion-proof product certification authority.

2) The respective certification parameters between the isolated safety barrier and the on-site intrinsically safe instrument are clear and comply with the requirements of Section 12, 2, 5 of GB/T3836.15.

3) If some parameters are not clear, it is necessary to form an intrinsically safe circuit system, which must be confirmed by the national authorized explosion-proof product certification authority.

### Application

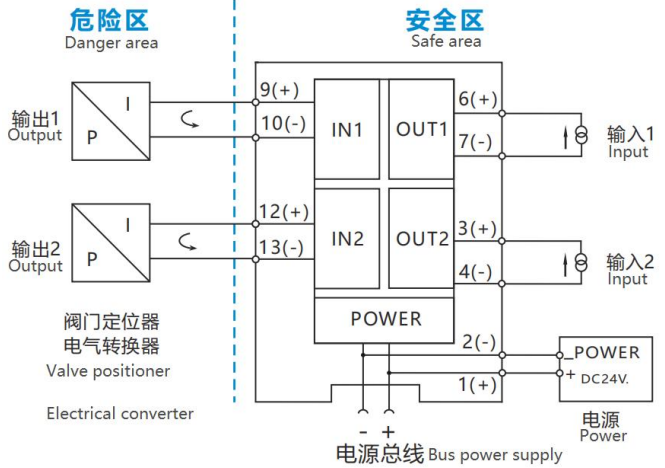

TM-IO511-EX 2 IN/2 OUT

Note:TM-IO111-EX Only include input11 and output1 part.

Note:The bus power supply function is optional. The customer needs to specify it when ordering and purchase the bus power supply module additionally.